

Uniphos Detector Tube Instruction Sheet

Direct Reading Length of Stain Type

Cyclohexane



SCY-5L

TWA (TLV): 100 ppm

STEL (TLV): NA

Flammable Range: 1.3 - 8.3%

MOST IMPORTANT:

Before using this product, carefully read this instruction sheet and strictly follow the recommended instructions.

SPECIFICATION:

Measurement Range	Extended	Standard	Extended
	Do not extend	10 – 1200 ppm	Do not extend
No. of Pump Strokes	1 (100 mL)		
Volume Correction Factor (VCF)*	1.0		
Sampling Time	1 minutes per pump stroke (100 mL)		
Color Change	Yellow → Pale green		
Shelf Life	1 year		
Storage condition	Below 10°C (50°F)		
Calibration condition	Calibrated at 20°C (68°F) and 50% RH.		
Active Reagent(s)	Chromium (VI) compound		

* Multiply the observed reading by the correction factor (VCF) to obtain the true concentration.


NOTES:

1. The sampling pump and detector tube together form a measuring system.
2. Uniphos tubes when used with pump of other manufacturers can result in considerable error in the reading and should be avoided.
3. Before each day's use, check the pump for leaks and use it only if it is free from leak.

HOW TO CHECK THE PUMP FOR LEAK:

Insert an unopened tube into the pump inlet and pull a stroke. After 3 minutes unlock the handle and release it slowly holding the handle and the cylinder securely, so that the **piston does not fly back violently**. If the handle returns to the 0 red line, the pump is leak free and fit for use.

MEASUREMENT PROCEDURE:

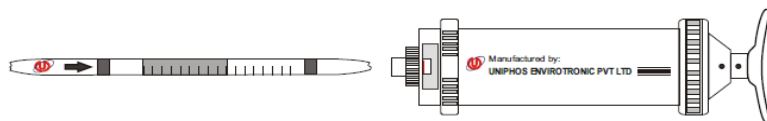

1. Break both ends of the tube using the tip breaker on the sampling pump.
2. Insert one end of the tube securely into the sampling pump inlet, ensuring that the arrow mark on the tube points towards the pump.
3. Rotate the piston shaft until the red dot on it aligns with the red dot on the pump body.

4. Insert the open end of the tube into the gas to be sampled and pull the handle 0.5 or 1 stroke until it locks in place, and wait for the sampling time indicated. The end-of-flow indicator (Vac. Test) near the inlet of the pump also shows when sampling is complete. For a second stroke, rotate the handle 90°, push it back to the 0 mark without removing the detector tube, and pull the piston handle for another full stroke. Repeat for additional strokes.
5. Remove the tube from the pump and read the concentration directly on the tube scale. If tailing occurs read at the midpoint of the taper. It is advisable to take the reading within a few minutes of sampling. If necessary mark the end of stain if it is to be read later.
6. Check for possible cross-sensitivities.

CORRECTION FOR TEMPERATURE AND HUMIDITY:

Temperature - Not necessary between 0 - 40°C (32 - 104°F).

Relative humidity - Not necessary between 10 - 90 %.

POSSIBLE INTERFERENCES:

Compound	Concentration (ppm)	Interference	Colour change / Comments
Aromatic Hydrocarbons		+	Pale Green

OTHER MEASURABLE COMPOUNDS:

Compound	Correction Factor	No. of pump strokes	Measuring range
n-Pentane	0.5	1	5 – 600 ppm
Hexane	0.7	1	7 – 840 ppm
n-Heptane	1.1	1	11 – 1320 ppm
n-Octane	1.64	1	16.4 – 1968 ppm

* Multiply the observed reading by the correction factor (VCF x GCF) to obtain the true concentration.

CAUTION:

1. The process of breaking the tube ends can generate flying glass bits and leave the tube with sharp edges. Use eye and hand protection while breaking the tube ends.
2. Keep tubes out of reach of unauthorized persons, especially children.
3. Dispose off used tubes according to local regulations.

IMPORTANT:

As we are continuously working on the improvement of products, we reserve the right to change the specifications without any prior notice.

USER RESPONSIBILITY:

It is entirely the responsibility of the user of the equipment (detector tube with pump) to see that the equipment is operated, maintained and repaired in strict accordance with the manufacturer's instructions provided with the equipment. It is also the sole responsibility of the user to ensure that the tubes are not used beyond their expiration date. The manufacturer and manufacturer's distributors are not otherwise liable for any incorrect measurement and its consequences or any damages resulting from user's negligence or otherwise.

Manufactured By: Uniphos Envirotronic Pvt. Ltd.
Nahuli (PO), Umbergaon (Tal.)
Valsad (Dist), Gujarat, India – 396108



11633

Rev.0512