Information Data Sheet

Detector Tube Nitr-2

Part No. (US): 804425

Part No. D5085844

1. Application

Detection of nitrous fumes (nitric oxide + nitrogen dioxide, NO + NO₂) in air or in technical gases.

2. Detector Tube Sampling Pump

KWIK DRAW(formerly MSA AUER) Gas-Tester® I/H, Gas-Tester® I / ThumbPump™-Sampler, Toximeter® II, Uniphos Kwik-Draw™-Pump or other suitable detector tubes pumps. Observe respective instructions for use.


3. Measuring Range

- 5 ... 140 ppm nitrous fumes at n=5 (5 strokes).
- 2 ... 70 ppm nitrous fumes at n=10 (10 strokes).

4. Chemical Reaction and Color Change

Oxidation of an aromatic amine by nitrogen dioxide. Nitric oxide does not change color of the indicating layer, it has to be oxidized in the conversion layer to nitrogen dioxide.

Color change: Yellowish Brown or blue/brown

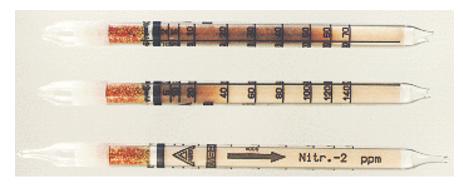

5. Ambient Conditions During Sampling

Detector tubes can be used without compensation of the reading between 10 °C and 30 °C (50 °F and 86 °F) and between 10% rh [0.9 g/m³ at 10 °C (50 °F)] and 80% rh [24 g/m³ at 30 °C (86 °F)].

6. Interferences and Cross Sensitivities

- No interference from:
 - hydrogen, methane, ethane, propane, carbon monoxide, carbon dioxide, nitrous oxide
- Halogens (chlorine, bromine), chlorine dioxide, ozone will be indicated. The sensitivity of indication is different.
- Hydrocarbons (e.g. butanes, ethylene, acetylene), hydrogen sulfide, ammonia are not indicated, but possibly will shorten the indication stain of nitrous fumes.

Manufactured By:

Uniphos Envirotronic Pvt. Ltd (100% EOU)

P.O. Nahuli - 396 108 Tal. Umbergaon,

Dist: Valsad, Gujarat, India Tel.: +91(260) 2730156 / 57 / 58

Fax: +91(260) 2730160

Marketing Office:

Uniphos Envirotronic Pvt. Ltd

Readymoney Terrace, 167, Dr. Annie Besant Road, Worli. Mumbai 400 018, India.

Tel.: +91(22) 6123 3500 Fax: +91(22) 2493 8826 +91 (22) 2497 8119

www.kwikdrawtubes.com