Information Data Sheet





Part No. (US): 655791

Part No. D5086851

1. Application

Detection of water vapour H₂O) in compressed air.

2. Sampling Procedure

Monitoring set for compressed air, KWIKDRAW (formerly AUER) Airtester HP, KWIKDRAW (formerly AUER/MSA) Airtester MP, observe included instruction for use.


3. Measuring Range

100 mg/ m³ ... 1000 mg/ m³ water vapour for a 2 L sample.

4. Chemical Reaction and Color Change

Precipitation of selenium from selenium/sulfuric acid by water.

Color change: Yellow Brown Or Brown/green.

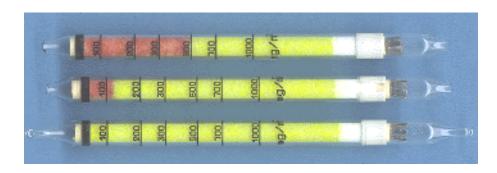

5. Influence of Temperature

Detector tubes can be used between 0 °C and 35 °C (32 °F and 95 °F). The calibration scales on detector tube are exactly valid if tubes have a temperature of 20 °C (68 °F) during measurement. If detector tube temperature deviates from 20 °C (68 °F), multiply reading (mg/ m³) with appropriate correction factor (see table)

Temperature of detector tube (°C)	0	5	10	15	20	25	30	35
Temperature of detector tube (°F)	32	41	50	59	68	77	86	95
Correction factor	1.85	1.55	1.35	1.17	1.00	0.85	0.70	0.57

Normally, detector tube temperature is equivalent to ambient temperature.

6. Interferences and Cross Sensitivities

No interference from:

- hydrogen, methane, ethane, propane, carbon monoxide, carbon dioxide, mineralic oil (vapor and mist).

Manufactured By:

Uniphos Envirotronic Pvt. Ltd

P.O. Nahuli - 396 108 Tal. Umbergaon,

Dist: Valsad, Gujarat, India Tel.: +91(260) 2730156 / 57 / 58 Fax: +91(260) 2730160

+91 (22) 2497 8119

Mumbai 400 018, India. Tel.: +91(22) 6123 3500 Fax: +91(22) 2493 8826

Marketing Office:

www.kwikdrawtubes.com

Uniphos Envirotronic Pvt. Ltd

Readymoney Terrace, 167, Dr. Annie Besant Road, Worli,

gasdetection@uniphos.com